



All products are trademarks of Nostalgia Products Group, LLC.
Worldwide design & utility patented or patents pending.
© 2010 Nostalgia Products Group, LLC.

www.nostalgiaelectrics.com

(rev. 10/07/11)



BIMM100 SERIES

Electric Bread Maker

Instructions and Recipes



CONTENTS

SAFETY	2
IMPORTANT PRECAUTIONS	3
IMPORTANT SAFEGUARDS	3
INTRODUCTION	4
PARTS & ASSEMBLY	5
HOW TO OPERATE	8
HELPFUL TIPS	9
CLEANING & MAINTENANCE	10
RECIPES	11
RETURNS & WARRANTY	27

SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

This is the safety alert symbol.



This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications:

120 Volts, 60 Hz, 600 Watts, ETL Approved


IMPORTANT PRECAUTIONS

1. NEVER immerse appliance or cord in water.
2. NEVER use near water.
3. NEVER use an abrasive sponge or cloth on the appliance.
4. NEVER leave appliance unattended while in use.
5. NEVER place anything other than what is intended to be cooked in the ceramic cooking pots.
6. Unplug appliance from outlet when not in use and when cleaning.
7. DO NOT place appliance in dishwasher.
8. Keep out of reach of children.
9. This appliance is NOT A TOY.
10. This appliance is not intended for use by young children nor the cognitively challenged without supervision.
11. Young children should be supervised to ensure that they do not play with the appliance.
12. DO NOT use outdoors.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

1. Read all instructions before operating this appliance.
2. Before use, make sure that the voltage of the wall outlet corresponds with the one shown on the rating plate.
3. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return the appliance to manufacturer or the nearest authorized service center for examination, repair, electrical or mechanical adjustment.
4. Do not touch hot surfaces. Always wear oven mitts or potholders when operating a hot appliance.
5. To protect against electric shock do not immerse cord, plugs, or Main Unit in water or other liquid.
6. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
7. Do not let cord hang over edge of a table or on hot surfaces.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

10. Children should be supervised to ensure that they do not play with the appliance.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
13. Do not touch any moving or spinning parts of the machine when baking.
14. Never turn on the appliance without properly attaching the Bread Pan.
15. Never hit the Bread Pan on the top or side to remove the loaf, as this may damage the Bread Pan.
16.  The Kneading Blade is a potential choking hazard. Make sure to remove the Kneading Blade from the bread loaf prior to slicing.
17. Do not put any objects other than intended ingredients into the machine.
18. Never cover the appliance with a towel or any other material, as heat and steam must be able to escape freely. A fire can be caused if machine is covered by, or comes into contact with, combustible material.
19. Always stop any running program to turn machine off, then remove plug from wall outlet.
20. Do not operate the appliance for other than its intended use.
21. Do not use outdoors.

SAVE THESE INSTRUCTIONS!

INTRODUCTION

Thank you for purchasing the ELECTRIC BREAD MAKER from Nostalgia Electrics™. With the ELECTRIC BREAD MAKER you create a variety of freshly baked breads, cakes and even jams! Mixing dough for baking pizza or rolls is also easy with this multi-function machine. The variety of uses for the ELECTRIC BREAD MAKER makes it a must-have item for every modern household.

